



## Atlas™ Light Installation Instructions

(Part #'s 69TL0031 & 69TL0040)

<b>PARTS INCLUDED:</b>			
			
Atlas LED Diffuser Task Light – 69452-19BA	Female/Female Connector – 690020.008	Male/Male Switch – 690020.006	30 Watt Power Supply – 690010.004
<b>TOOLS NEEDED:</b>			
			
Wire Management Clip – U1B5NZM	Striker Plates	Phillips Screwdriver (installation into non-metal substrates)	

## Atlas Light Safety Instructions

**IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.**

\*This power supply must be installed according to the National Electrical Code and local building codes

\*To avoid a hazard to children, account for all parts and destroy all packing materials.

\*If you are unsure about the installation or use of this power supply, consult a qualified electrician.

**\*CAUTION:** To reduce the risk of fire and electrical shock, use only fixtures intended for use with power supply designed for use with elio Taskrite LED light.

\*Do not use wet locations.

\*Do not cut any track sections.

\*Do not install any luminaire assembly closer than 6" from any curtain or other combustible material.

**LOW VOLTAGE CAUTIONS**

**APPLICATIONS**

Low voltage electronic power supplies should not be installed in areas with excessive heat around the power supply. Consult a qualified lighting designer if uncertain of the sustainability for a given application.

**SERVICE**

There are no user-serviceable parts inside. Opening unit will void warranty. Contact elio for service parts at 888-871-8860.

## Atlas Light Warranty Information

**GENERAL PRODUCT LIMITED WARRANTY**

ITC Incorporated under its corporate name or the elio trade name (collectively hereafter referred to as the "Company") warrants, to the original purchaser, that the product will be free of defects in materials and/or workmanship for the period of time set forth herein. This warranty period will begin from the original date of purchase of the product. Except as set forth below, this general product limited warranty will extend for three years. All assist handles will have a three year warranty period, provided that crazing caused by chemical attack from a contaminant is not covered by any warranty. Power supplies also have a 3 year warranty.

**MAXIMUM LIABILITY** The Company's liability to repair or replace a damaged item shall be limited to the original purchaser of the item at the original invoice price of the damaged unit. Labor and freight will not be included

**INSPECTION** The Company reserves the right to review the damaged product and the site where the damage occurred. The Company may require the purchaser to ship the item to the Company for inspection. The damaged item must remain available for inspection until the claim is finalized. In the event the Company requests to inspect the product, it agrees to dispatch its findings pertaining to the alleged defective product within 45 days of receiving the product. Whenever claims are settled, the Company reserves the right to be subrogated under any existing insurance policies the purchaser may have.

**EVENTS THAT VOID WARRANTY** All above warranties are null and void if any one or more of the following events occurs: (a) the item is not provided to ITC for inspection upon the Company's request; (b) the Company determines that the item has been improperly installed, altered in any way or tampered with; (c) the Company determines that the item was not used under normal operating conditions or in accordance with labels or instructions for the item including, (d) the Company determines the product was not properly maintained, and/or; (e) the Company determines that an unauthorized repair, modification, disassembly, or other changes to the product created the alleged defect. In addition to the foregoing, this Warranty does not protect against damage to the product when the Company determines, in its sole discretion, that the damage resulted from acts of God such as lightning, flood, earthquake, war, vandalism, theft, normal-use wear and tear, terrorism, strikes, and labor stoppages. This warranty specifically excludes damage, deterioration or discoloration caused by sunlight or similar ultraviolet rays and/or wavelengths and/or dents, holes or scratches to the unit caused by stones, rocks and/or debris.

**EXCLUSIVE REMEDY** This Warranty contains the sole warranty of the Company with respect to the product and is given in lieu of all other warranties. There are no other warranties, express or implied, including implied warranties of merchantability or fitness for a particular purpose and any implied warranties that cannot be waived and/or excluded are hereby limited in duration to the terms of this Warranty.1


**LIMITATION ON LIABILITY** In no event shall the Company or any affiliate of the Company be liable for direct, indirect, special, incidental, consequential, or multiple damages arising out of the use of the item, regardless of the legal theory on which such claim is based, even if the Company has been advised of the possibility of such damage.

## Atlas Light Installation Instructions

- 1.** Determine where your LED light fixture will be installed. In Pencil lightly outline where the end caps lie **(Note: If installing on a metal surface then proceed directly to Step 4).**



- 2.** Insert female/female connector into LED lights male receptor.

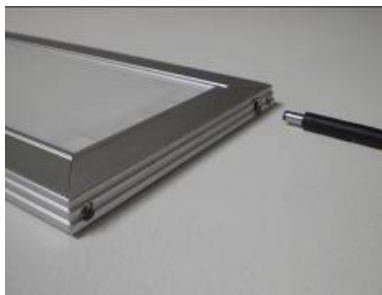

- 3.** Connect the male/male switch to the female/female connector.



- 4.** Insert female end of the 30 watt power supply to the open end of the male/male switch. Plug power supply into available electrical outlet.



- 5.** Attach light to metal plates and plug in power cord. Use the wire management clips to adhere cord to the underside of the overhead.



- 6.** To install an add-on unit, simply install the provided jumper cable into the task lights.

