







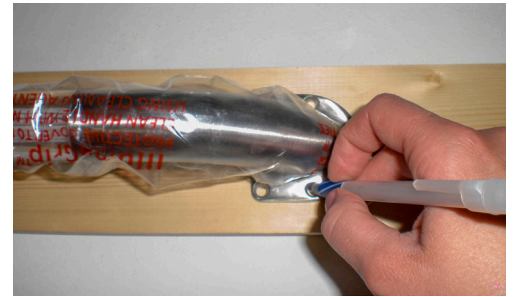
PARTS/TOOLS NEEDED:

					
Assist Handle	Power Drill	Butt Splice Connectors (Not Provided)	Wire Grommet (Not Provided)	#8 Flat Head Stainless Steel Screws (Not Provided)	Silicone Sealant (Not Provided)


INSTALLATION CONSIDERATIONS

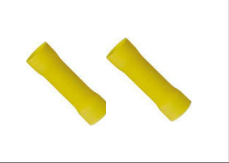- Disconnect power before installing, adding or changing any component.
- To avoid a hazard to children, account for all parts and destroy all packing materials.
- It is recommended that fuse protection be added to the positive (+) input.
- All electrical connections should be made inside a watertight junction box.
- It is the installers responsibility to verify that the location of the installed IllumaGrip provides enough support for the handle. Any installation other than what is recommended will be the responsibility of the installer and will void the warranty.
- Note, the handles are shipped with tape around the joints and should be removed after installation.

1. Mark the install location for your handle. Pre-drill the wire access and mounting holes. To prevent damage to the wires install a wire grommet.



2. Wire the light based on the wiring diagram. Feed wires back into the hole and use silicone sealant around the wires to prevent any ingress of water.

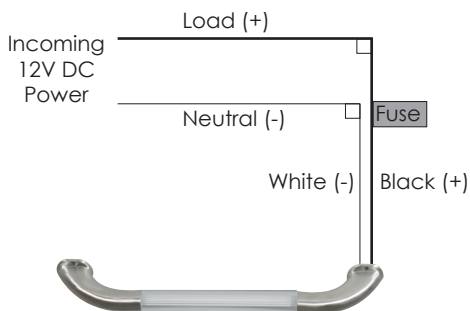

3. Use #8 stainless steel flat head screws to mount the end caps.

