



# Undercabinet Light Install Instructions

(Part #'s: 69700B1)

## PARTS/TOOLS NEEDED:

				
Undercabinet Light	Small or Large Power Supply	Mounting Plates w/ Screws (Wood installation only)	Jumper Cables (optional)	Wire Management Clip

### IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.

- \*Disconnect power before installing, adding or changing any component.
- \*To avoid a hazard to children, account for all parts and destroy all packing materials.
- \*Use only with UL approved power supply.


#### 1. Wood Overhead Installation:

Clean the mounting surface with a 50/50 mixture of alcohol and water prior to installation. For more detailed instructions\* please refer to the 3M website.

The light and switch will come with the mounting plates (optional mounting screws included) already attached to the light, simply remove the tape backing and press in place.

#### Metal Overhead Installation:


If installing on a metal overhead, remove the mounting plates and attach the light and switch to the overhead.

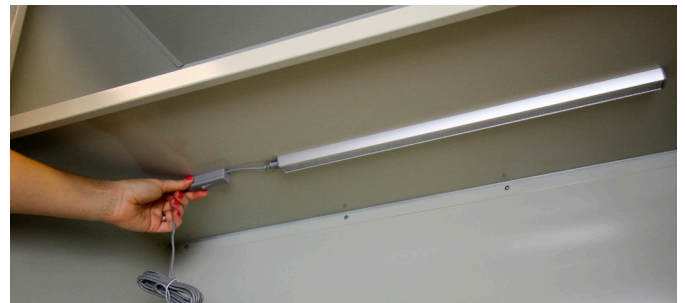

2. Plug the connector on the power supply cord into the light. If using the larger power supply you will also need to plug in the cord on it as well.



3. The wire management clip will come pre-installed on the wire. Install by removing the paper backing and pressing in place.

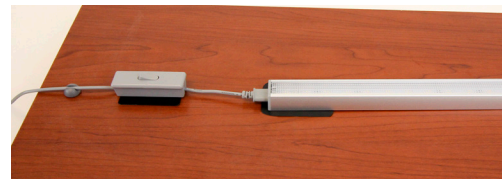

4. If using more than one light, plug the jumper cable into the ends of the lights. Plug in power supply and turn on lights. Attach wire clips as required to secure wire.



#### 5. Light Length Installation Guide

Overhead Size	18" Light	30" Light	Power Supply Needed
30"	1		12W - 690010.100
36"	1		12W - 690010.100
42"		1	36W - 690010.101
54"	2		36W - 690010.101
60"	1	1	36W - 690010.101
66"	1	1	36W - 690010.101
72"		2	36W - 690010.101
84"		2	36W - 690010.101

\*[http://www.3m.com/3M/en\\_US/bonding-and-assembly-us/resources/full-story/?storyid=b3996cbd-9954-455f-8e72-88e452ca38c0](http://www.3m.com/3M/en_US/bonding-and-assembly-us/resources/full-story/?storyid=b3996cbd-9954-455f-8e72-88e452ca38c0)

Please visit [www.itc-us.com](http://www.itc-us.com) for warranty info

3030 Corporate Grove Dr • Hudsonville • MI • 49426

Phone: 616-396-1355 • [www.itc-us.com](http://www.itc-us.com) • [sales@itc-us.com](mailto:sales@itc-us.com) • DOC#:710-00058 Rev C • 02/15/18